# MiTek®

# Suggested Spare Parts and Supplies

## For the Cyber®A/T saw

**Automation Documentation** 

©2024 MiTek Inc.

All rights reserved, including the right to reproduce this publication or portions thereof in any form whatsoever | Confidential and Proprietary

**A. Moll – April 2024** 

## **Useful Items to Have On-Hand**

Torpedo Level



 Fingerless or Touch-Screen Compatible Gloves



Standard Framing Square
Useful for calibration



Tape Measure



Spare Parts Checklist



Cyber A/T



### **Cyber A/T Spare Parts Kit**

The Cyber A/T Saw Spare Parts kit (PN 60000-901) comes with every Cyber A/T saw and has useful items for maintaining a Cyber A/T saw.

Contact Automation Support for more information or to replenish your kit.

The items included in the spare parts kit (60000-901) are:

• 370100	SPRING-DIE 3/4x2.5	• 519910	S04G (BALLUFF) RX3i PLC,INPUT,16pt,
• 504460	9-1210-21 ENCODER,ABS,PVM5SN-011YY	• 519911	120VÄC,IC694MDL240 (EMR) RX3i PLC,OUTPUT,16pt,
• 504481	WSSWRKSW456-1M,(INTRLNK FILTER,ELE,10",5 PER PK.	• 519938	120VÄC,IC694MDL340 (EMR) PLC RX3I,OUTPUT,MOD,16PT
• 508055	SK3172.100,(RITTAL)CYBER CORD-SET,BCC M415000-	• 557392	IC694MDL940(EMR) COUPLING,INSERT,L070
• 508056	10M,STRAIGHT(BALLUFF) CORD-SET,BKS-S20-3-SH-	• 557457	(URETHANE)LOVEDOY INSERT XFCBB15 BOSTON
• 509823	07.5,90DEG(BALLUFF) MTR STRTR,16A,NON-REV,AC	• 78420-513	GEAR 08066 SAW MOTOR, 7HP W/ HUB
• 509836	NO,AF16-30-10-13 (ABB) MTR STRTR,16A,REV,AC	• 78420-514	LUBRICATING BLADE MOTORS SAW MTR, 13HP W/HUB
• 509856	AF16R-30-22-13 (ABB) OVERLOAD,.74-1.OA,	• 78578	LUBRICATING BLADE MOTORS, STOP, HOLDDOWN, CNTR
• 509858	AUTO/MAN,TF42-1.0(ABB) OVERLOAD,.1.3-1.7A,	• 78581	CHANNEL, S/A (UNPAINTED) STOP, HOLDOWN, FRONT
• 509859	AUTO/MAN,TF42-1.7(ABB) OVERLOAD,1.7-2.3,	• 78582	CHANNEL, S/A (UNPAINTED) STOP, HOLDOWN, REAR
• 515831	AUTO/MAN,TF42-2.3(ABB) PROX,BES-M08EG-NSC23F-	• 78589	CHANNEL, S/A (UNPAINTED) BLADE LUMBER GUIDE
		• 94001	STARRETT VFD, PROGRAMMED, W/509765



# MITEK AUTOMATION DOCUMENT LOCATOR



#### WARNING

CUT, CRUSH, AND ELECTROCUTION HAZARDS.

Every person working on or near this equipment must watch or read the safety documentation listed below before working near this equipment!

Failure to follow safety, operating, and maintenance procedures in the safety documents listed below may result in severe injury or death.



#### SAFETY INFORMATION

https://www.mitek-us.com/resources/machinery/safety-videos/

Use our safety information as part of your own safety training program for every employee.

Safety information may be available in English and Spanish.



#### **EQUIPMENT MANUALS**

https://www.mitek-us.com/resources/machinery/equipment-manuals/

Keep a printed copy of the Operation section at the machine and the Maintenance section where maintenance can easily find it.

Color images must be printed in color for clarity.

The manual's safety section is provided in English and Spanish.



**Parts** 

#### PARTS GUIDES

https://www.mitek-us.com/resources/machinery/find-and-order-parts/

Use our interactive Parts Guides to easily locate part numbers and make ordering replacement parts faster and easier.

#### CONTACT AUTOMATION SUPPORT

E-mail: mitekparts@mii.com (with part number)

Web site: mitek-us.com Online

Videos: www.youtube.com/mitek-usa

In-Person 301 Fountain Lakes Industrial Drive.

St. Charles, MO 63301

E-mail: machinerysupport@mii.com

Phone: 800-523-3380